

Gyproc® Levelline

High-Strength corner tape to perfectly fit any corner



Gyproc® Levelline CT Corner

Gyproc® Levelline is a special corner bead composed of polymer core with a built-in flexible hinge that fits to any inside or outside corner angle on drywall or ceiling.

Gyproc® Levelline has uniform and structural bond due to its paper backing. Gyproc® Levelline is perfect for any inside and outside corners, bay windows and archways because it easily adjusts to all angles. It also eliminates pre-measuring and pre-creasing, saving valuable installation time. Fix Gyproc® Levelline using Gyproc Jointing compound with a taping knife to get the perfect corner.

- Tapered co-polymer core
- Memory-free hinge
- Excellent standout strength for a truer, straighter run

Available length Package size & Packaging:
30.5m x 69.9 mm Roll (Box)



KEY BENEFITS:

IMPACT RESISTANCE
Gyproc® Levelline corner bead provides extra tough & straight drywall corner that withstand severe impacts & settling.

ROBUST
High strength co-polymer core of Gyproc® Levelline offers strong and uniform surface which prevents cracks,blows and dents.

EASY TO INSTALL
Gyproc® Levelline is quick,safe and easy to install due to its metal-free composition. It can be install using the same methods as traditional corner tape.

FLEXIBLE
Memory-free hinge can hold the desired angle and makes it easy to adjust for both internal and external corners.

NO TAPING-OUT
Gyproc® Levelline made with special formulated surface that accepts any jointing compound and resist abrasion.

NO RUSTING
Gyproc® Levelline CT Corner core made of paper and polymer,so their is no chance of rusting.

Installation instructions



1 Open the Gyproc® Levelline box and feed the product through the slot on the side. Insert the hook of the tape measure into the narrow slot to measure the length of Gyproc® Levelline required.



2 Cut to the desired length with light duty snips or scissor. Its metal-free composition makes cutting safer and easier.



3 With an appropriate taping knife, apply Gyproc Jointing Compound to both sides of the corner.



4 Once applied, press Gyproc® Levelline into position. Remove the excess jointing compound with a taping knife and let it dry.



5 Use an appropriate finishing tool to skim over the edges of the corner and let it dry.



6 Once dry, sand and finish the corner.

EASY



Metal Bead

Gyproc® Levelline

FLEXIBLE



External Corner

Internal Corner

ROBUST




Metal Bead

Gyproc® Levelline

KEY BENEFITS

With a high strength tapered, co-polymer core, Gyproc® Levelline will not split or dent

The formulated surface paper accepts any finish and resists abrasion

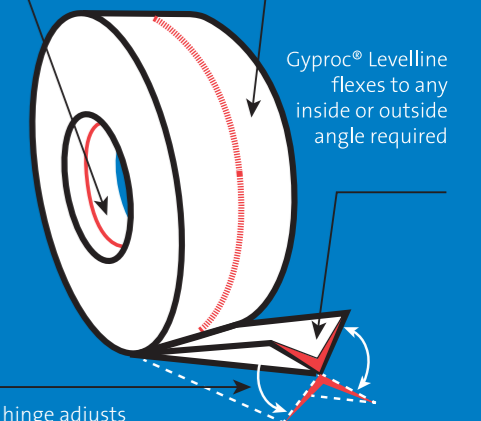

Gyproc® Levelline flexes to any inside or outside angle required

Its memory-free hinge adjusts to any angle, eliminating pre-creasing for instant application